
Cable Carriers

Compact

Slide Rails / Cable Carriers

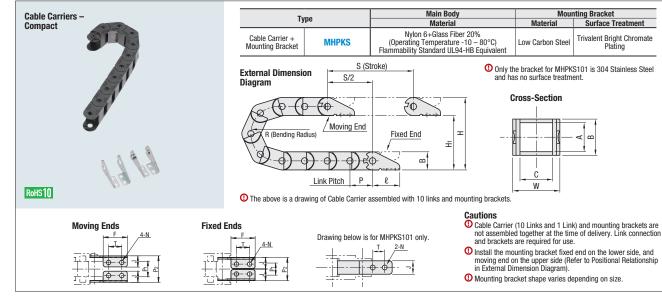

Part Number					Cal	Cable Carrier Dimensions Mounting Dimensions											н		HF.	К	Weight per				
Part Numi	Jer	Bending Radius	No. of Links	Mounting Direction*	A	В	С	w	Р	Ł	-	_		N	Movin	g End	Fixed	d End	(Mounting	H1	(Required Physical	(Arc +	Meter (kg) (Reference)		
Туре	No.	nauius		Direction	А	В	U	vv	P	ť	•	'	J	IN	P ₁	P ₂	P ₁	P ₂	Height)		Height)	Margin)			
	101	19	5–25	(Common to the Outer and Inner Circumference)	9	12	9	16	20	18	1	8	9	3.2	_	1	_	-	50	38	62	109.7	0.105		
MHPKS	202	30	6-34		16	20	18	26	25	30					12.4	24.4	10.4	22.4	80	60	95	144.2	0.222		
Cable	202	45	8-36		10	20	10	20	25	30	20	10	10	4.5	12.4	24.4	10.4	22.4	110	90	125	191.3	0.222		
Carrier +	203	30	6-34	A	10	200	24	32	25	30	20	10	10	4.5	10.4	20.4	10.4	00.4	80	60	95	144.2	0.04		
Mounting Brackets	203	45	8-36		16	20	24	32	2 25	30					18.4	30.4	16.4	28.4	110	90	125	191.3	0.24		
Diackets	004	38	6-31			D					1	40					23.6				98	76	118	179.3	0.45
	204	50	7-32	В	16	22	29	43	32	32 43		10	١.,		23.6	39.6	20	36	122	100	142	217	0.45		
	000	38	6-31	1	40	00		50	-00	40	32	18	14	5.8	00.0	55.0	00	50	98	76	118	179.3	0.54		
	206	50	7_32	1	16	22	44	59	32	43					39.6	55.6	36	52	122	100	142	217	0.51		

Part Num	iber	Bending Radius	No. of Links	Mounting Direction*		
Туре	No.					
	101	19	5–25	(Common to the Outer and Inner Circumference)		
MHPKS	202	30	6-34			
Cable	202	45	8-36			
Carrier +	203	30	6-34	A		
Mounting Brackets	203	45	8-36			
Didonoto	204	38	6–31	В		
	204	50	7–32			
	206	38	6-31			
	200	50	7–32			


Cautions on Model Selection

① A Cable Carrier and suitable Mounting Brackets (Moving Ends x 1 set, Fixed Ends x 1 set) are in a set. ① Please note that part number varies depending on outer/inner circumference mounting.



Part Number	-	Bending Radius	-	No. of Links	-	Mounting Direction	1
MHPKS203	_	30	_	18	_	A	•

Mounting Direction

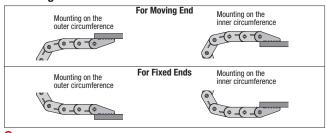



O In the case of new designs, there may be a possibility that carrier links run short. It is recommended that links are selected longer by one or two links, and are adjusted (removed)

*Mounting Bracket Structural Components

	No.	Mounting Disastion	Mounting Bracket Structural Components							
	NO.	Mounting Direction	For Moving End							
	101	S (Common to the Outer and Inner Circumference)	Common to the Outer and Inner Circumference	Common to the Outer and Inner Circumference						
	202–206	Α	Mounting on the Outer Circumference	Common to the Outer and Inner Circumference						
-	202-200	В	Mounting on the Inner Circumference	Common to the Outer and Inner Circumference						

Link Connection & Disconnection

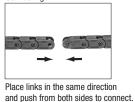


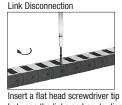

between the links and pry to disconnect.

Cable Carriers

With Open-Close Flap

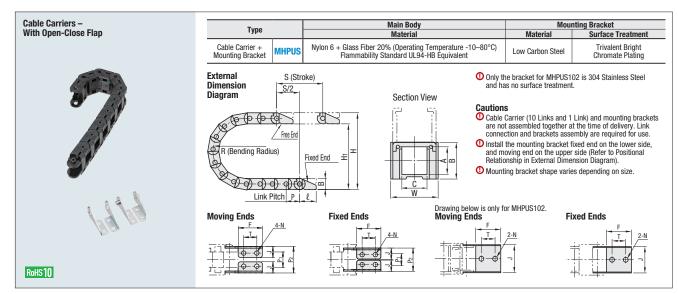


Part Numb		Dandina	No of	Mounting	Cal	ble C	arrie	r Dim	ensi	ons	Mounting Dimensions								Н		HF	K	Weight per
Part Numb		Bending Radius	Links	Mounting Direction*	A	В	С	w	Р	Ł	F	т	J	N	Movi	ng End	Fixe	d End	(Mounting	H1	(Required	(Arc +	Meter (kg)
Type	No.	nauius	LIIIKS	Direction	^	ь	٠	VV	г	·	'	'	J	14	P ₁	P ₂	P ₁	P ₂	Height)		Physical Height)	Allowance)	(Reference)
	102	19	5–23	(Common to the Outer and Inner Circumference)	9	12	20	27	20	30	22	12	*25 (23)	4.5	_	_	_	_	50	38	65	99.7	0.12
		25	6-34																70	50	85	128.5	
	202	30	6-34	ļ	14	20	14	26	25	30					9.8	21.8	8	20	80	60	95	144.2	0.25
		45	8-36								20	10	10	4.5					110	90	125	191.3	
	203	30	6-34		14	20	20	32	25	30					15.8	27.8	14	26	80	60	95	144.2	0.26
MHPUS	203	45	8-36		' 7	20	20	32	20	30					13.0	21.0	17	20	110	90	125	191.3	0.20
Cable	204	38	6-36		14	22	20	40	32	43					17.4	33.4	14	30	98	76	118	179.3	0.5
Carrier +	204	50	7-37	Α	17		20	40	02	40	32	18	14	5.8		00.4	1.7	00	122	100	142	217	0.0
Mounting	206	38	6-36	l	14	22	40	60	32	43	02	10	1.4	0.0	37.4	53.4	34	50	98	76	118	179.3	0.56
Brackets		50	7-37		ļ			-							07	00	ļ .		122	100	142	217	0.00
	306	50	6-38	В	24	34	44	60	45	60	40	24	20	7	35.6	55.6	32	52	134	100	160	257	0.64
	000	100	10-42	P		Ŭ.	٠							٠.	00.0	00.0	02		234	200	260	414	0.01
		50	6-38																140	100	170	257	
	408	75	8-40	ļ	24 5	40	58	78	45	60	40	24	22	7	44	72	40	68	190	150	220	335.5	1.1
	100	100	10-42				"			00				'				00	240	200	270	414	
	-		13-45		<u> </u>														340	300	370	571	
		50	6-38	l	l							٠.		_					140	100	170	257	
	412	75	9-41		24.5	40	97	117	45	60	40	24	22	7	83	111	79	107	190	150	220	335.5	1.3
		100	10-42																240	200	270	414	

() * () indicates Fixed End dimensions


Part Numl	ber	Danidian Dadina	No of Links	Manualina Dinastiant		
Туре	No.	Bending Radius	No. of Links	Mounting Direction*		
	102	19	5–23	(Common to the Outer and Inner Circumference)		
		25	6-34			
	202	30	6-34			
		45	8-36			
	203	30	6-34			
	203	45	8-36			
MHPUS	204	38	6–36			
Cable	204	50	7–37	A		
Carrier +	206	38	6–36			
Mounting	200	50	7–37			
Brackets	306	50	6–38	В		
	300	100	10-42			
		50	6–38			
	408	75	8–40			
	700	100	10-42			
		150	13-45			
		50	6–38			
	412	75	9–41			
	1 1	100	10-42			

Cautions on Model Selection

① A Cable Carrier and suitable Mounting Brackets (Moving Ends x 1 set / Fixed Ends x 1 set) are in a set. O Please note that part number varies depending on outer/inner circumference mounting.

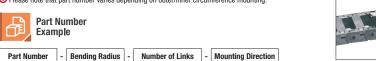

Mounting Direction

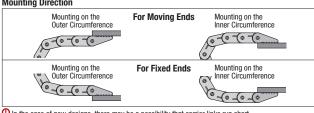


On the case of new designs, there may be a possibility that carrier links run short.

It is recommended that links are selected longer by one or two links, and are adjusted (removed) at the time of installing (removing) device.

*Mounting Bracket Structural Components

No.	Mounting Direction	Mounting Bracket Structural Components								
NO.	Mounting Direction	For Moving End	For Fixed Ends							
102	(Common to the Outer and Inner Circ.)	Common to the Outer and Inner Circumference	Common to the Outer and Inner Circumference							
202-206	Α	Mounting on the Outer Circ.	Common to the Outer and Inner Circ.							
202-200	В	Mounting on the Inner Circ.	Common to the Outer and Inner Circ.							
306-412	Α	Common to the Outer and Inner Circ.	Mounting on the Outer Circ.							
300-412	В	Common to the Outer and Inner Circ.	Mounting on the Inner Circ.							

Flap Opening and Closing

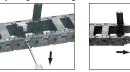

To open the flap, insert the tip of a flat head screwdriver into Open link flaps, mate the the side window and pry. To



blocks with each other and push the both ends to joint fit

Open the link flaps, insert and push down a flat head screwdrive in a gap between the links to



742