Rubber Heaters - Overview

Feature

- · Flexible and thin silicon rubber which fits the heating plane firmly is used
- They are suitable for generating uniform heating over the heating plane
- · Maximum operating temperature of heater surface is 220°C. (Selectable Type: 200°C. High Temperature Type: 250°C)

■ Basic Structure

 
A resistance element is placed between two top and bottom sheets, and internal air is removed. and the structure is formed from assembled thin sheet

■How to Mount


- (1)Clamn : Sandwiches the rubber heater between a metal plate and a heating (Metal Retainer) product, Allowable pressure against the heater plate is 1,47MPa {15kgf/cm²}. ②Silicon Adhesive: Applies the special silicon adhesive to rubber heater and bond with the heated object. Maximum Operating Temperature is 180°C.
- ③Tape Adhesive : Attach the double-stick tapes to the rear surface of the rubber heater, and bond with the heated product. Maximum Operating Temperature: 150°C.


■Precautions for Use

- Do not let the heaters run idle in the atmosphere. Do not let heater float against the mounting surface. However, idle running is possible in the ordinary temperature atmosphere, when the electric density is 0.5W/cm² or less.
- TWhen sandwiching the rubber heater between a metal plate and the heated product, prevent lead wires and lead wire retaining sheets from touching the metal plate.
- Avoid use in the atmospheres such as in steam, water and corrosive gas.
- Not applicable for use in machine holes and not usable when the rubber is damaged.
- Do not bend the heater. The minimum bending angle R (radius) is 25.
- Do not use over the rated voltage (V).
- When removing the heater from the heated object, make sure the power is turned off. Do not touch the heater immediately after the power is turned off.
- The state of the s Be very careful about heater setting.
- Keep the lead wire retaining sheets free from pressure



 Actual Measurement Data: Time of Increasing Temperature for Each Electric Power (Electrical Power Density)

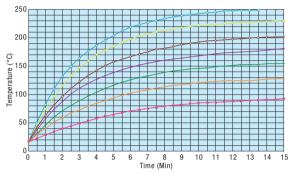



Heater Size	: MRHSS(200x150)
Heated Object	: Aluminum (210x150x1.5)
Heater Mounting Method	: Bonds both sides with adhesives for rubber heater.
Point of Temperature Measuremen	t: Measured by K thermocouple at the center of aluminum surface.
Ambient Temperature	: Room Temperature 15°C

Selecting Method

1) Determine the heat quantity(W) required for the heater.

Based on the mass, thermal capacity, temp, rise, and time required to reach the targeted temperature of the heated object, the following formula is used for the calculation

Colorina Doquirad for The Heater (IdM)	wo _ Weig	ht of Heating Product	t (kg) x Specific	Heat of Heating	Product (kcal/kg°C) x Ir	ncreased Temp	erature (°C				
Calories Required for The Heater (kW) =		.vv) — —	860x Heating Time (h) x Efficiency (η)									

It is difficult to calculate the Efficiency (η) precisely because it varies by heat-retention, insulation, arrangement of heaters but the suitable value is generally about 0.2~0.5.

· Specific Gravity and Specific Heat of Major Materials

Material	Specific Gravity (g/cm²)	Specific Heat (kcal/kg°C)
7075 Aluminum Alloy	2.80	0.230
Steel	7.85	0.113
Stainless Steel	7.82	0.110
Brass	8.70	0.100

Ex.) When the heater block of around 0.2kg, 100x100x3 (mm) is heated to 150°C stainless steel.

(It is assumed that the temperature of the heater block is 20°C, and the increasing time until the set temperature is 15 minutes)

Calories Required for The Heater (kW) =	0.2 x 0.11 x (150-20)	— = 0.04 (kW)
Calulies nequiled for the fleater (kiv) =	860 x 0.25 x 0.3	- 0.04 (KVV)
	000 X 0.20 X 0.0	= 40 (W)

Efficiency is assumed to be 0.3. * Time of Increasing Temperature for Each Electric Power (Electrical Power Density) See ahove

· Selection of Rubber Heaters

1) Determine the shape and size of heaters

Ex.) MRHSS	-	100 (A)	-	100 (B)	
------------	---	------------	---	------------	--


②Determine the voltage (V) to use.

Ex.) MRHSS	-	100 (A)	-	100 (B)	-	V200 (V)	
------------	---	------------	---	------------	---	-------------	--

3) Determine the calories (W) required for the heating product

Ex.) MRHSS - 100 - 100 - V200 - W40 (A) (B) (V) (W)	Ex.) MRHSS -
---	--------------

 (4) Available when the calories (W) / the size of a heater (cm2) is between 0.2 and 0.8 (W/cm2).



⑤Determine the length of lead wires.

* Lead wire length is 1000 for square type with thermostats (P.1514).

Ex.) MRHSS	-	100 (A)	-	100 (B)	-	V200 - (V)	W40 -	F700	
		(- 7		(-)		(-)	(/	(.)	

· Temperature Controllers

All Rubber Heaters are single-phase. Select temperature controllers (P.1560) for single-phase (MTCS, MTCD and MTCRM)

For the possible numbers of cartridge heaters to connect one controller, refer to the example below.

(Ex.) When connecting MTCS (Max. allowable electric current: 20A) to MRHSS-200-200-V100-W210-F1000.


Electric Power (W) The electric current which streams in one cartridge heater $\;\;\;$ Electric Current (A) = 100(V) Voltage (V)

The possible numbers (N) of cartridge heaters to connect one temperature controller (MTCS) N=-

Rubber Heaters

Square

• Be sure to refer to "Precautions for Use" in the Rubber Heaters Overview on the left-hand page.

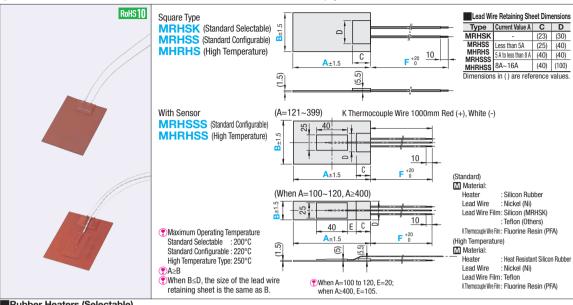

nubbel neate	ers (Selectable)						
Part Number Type	A	В	V (Voltage)	W (Electric Power)	F (Lead Wire Length)	Electrical Power Density (W/cm²)	Unit Price
	50	50		20			
	100	50	100 200	30	1000	0.2≤W/cm²≤0.8 • W/cm²=W/(AB/100)	
(Square)		75		50			
MRHSK		100		60			
	125	100]	80			
	150	100		90			

Rubber Heate	Rubber Heaters (Configurable)											
Part Number	1mm Inc	crement		W (Electric Power)	F (Lead Wire Length)	Electrical Power Density						
Type	Α	В	(Voltage)	10W Increment	10mm Increment	(W/cm²)						
MRHSS MHRHS	50~500	05 400	100 200	10~1600	400 4000	0.2≤W/cm²≤0.8						
MRHSSS MHRHSS	100~500	25~400			100~1000	• W/cm²=W/(AB/100)						



Price Configure Online

								Unit	Price							
Α	MRHSS B25-50 B51-100 B101-150 B151-200 B201-250 B251-300 B301-350 B351-400								MHRHS							
	B25~50	B51~100	B101~150	B151~200	B201~250	B251~300	B301~350	B351~400	B25~50	B51~100	B101~150	B151~200	B201~250	B251~300	B301~350	B351~400
50~100			-	-	-	-	-	-			-	-	-	-	-	-
101~150				-	-	-	-	-				-	-	-	-	-
151~200					-	-	-	-					-	-	-	-
201~250						-	-	-						-	-	-
251~300							-	-							-	-
301~350								-								-
351~400																
401~450																
451~500																
	Unit Price															
Α	MRHSSS								MHRHSS							
	B25~50	B51~100	B101~150	B151~200		B251~300	B301~350	B351~400	B25~50	B51~100	B101~150		B201~250	B251~300	B301~350	B351~400
100~150				-	-	-	-	-				-	-	-	-	-
151~200					-	-	-	-					-	-	-	-
201~250						-	-	-						-	-	-
251~300							-	-							-	-
301~350								-								-
351~400																
401~450																
451~500																



Alterations	Code	Spec.	No.	Price Adder		Alterations	Code	Spec.	No.	Price Adde
		Affix double-sided tape to the rear surface of the rubber heater. Shipped with tape affixed. Tape Thickness 0.2mm. Naximum operating temperature for rubber heates with tapes is 150°C. Obusing the gase arent stold sparrately. Attaching Double-sided Tapes is not applicable to Selectable Type.	1		ĺ	Length of Thermocouple Wire			1	
With Double- sided Tape	TPG		2					Changes length of thermocouple wire from 1000mm to 2000mm.		
			3							