

SCREW REMOVER FOR SODICK INJECTION MOLDING MACHINE


SCREW REMOVER

DEDICATED FOR SODICK INJECTION MOLDING MACHINE



■ Application Use to remove the injection screw of Injection Molding Machine manufactured by Sodick.



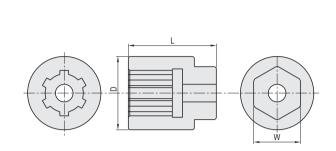

The standardized under the supervision of Sodick Co., Ltd.

Material	SCM435 tempering
S Surface treatment	Black oxide

Applicable screw dia.	10/	В		Part Number		Unit Price
	D L	Туре	No.	1~3 pcs		
14/18	24	35	50		14-18	
22		40 55		22	[6]	
25		45	20	M-SSJ	25	ati
28/32	- 32	28/32 32 50	60	IVI — 333	28-32	ot l
40		50 60		40		
50	36	58	75		50	



Part Number -SSJ-14-18 M-SSJ-50



Days to Ship





Quotation



Example



- Insert the jig into the screw spline and lightly tighten it with bolts.
 Pull out the screw while rotating it with a wrench, etc.
- When performing maintenance on the molding machine, check the Sodick's instruction manual and implement appropriate safety measures against burns and electric shock, etc.
- Perform the necessary preparations for screw removal, such as removing the plasticizing motor and non-return unit.