


## Plug & dustproof/waterproof cover (STP) assembly method


■ Model number: Listed in the NWCN078P-080-001-SET assembly method. (Product Page [OP. 2024](#))




1 Pass the terminator and the seal through the cable.

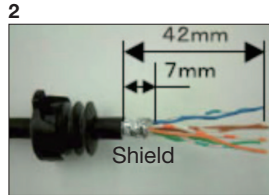


2 Peel about 42 mm of the sheath with a stripper. (about 6 ~ 7 mm of the shielded part)

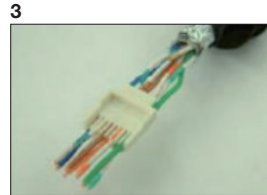

3 Pass the cable through the included guide holder.

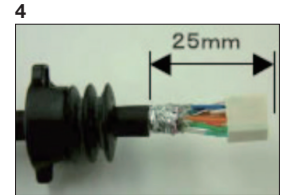


4 Cut off the extraneous cable at the tip with nippers etc. to about 25 mm.

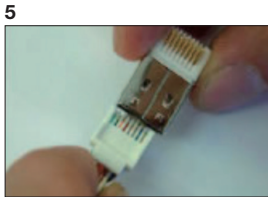


5 Insert the guide holder up to the tip of the plug.



6 Crimp with dedicated crimping tools.

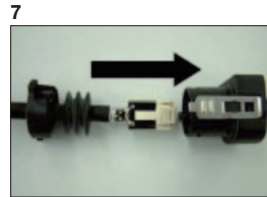

7 Insert the plug and fit into the cover.

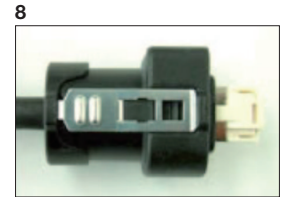


8 Insert the terminator and seal into the cover to complete the assembly.


## FAQ

■ Q1 The claw is flat and even if I insert it I don't hear a click


■ A1 This can be easily fixed with the procedure below.

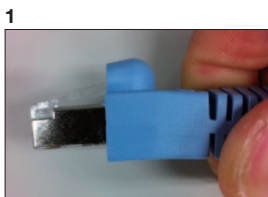


1 Clearly the claw is flatter compared to step 4.

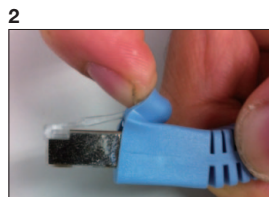

2 Pull up hard on the claw protector part of the connector cover.

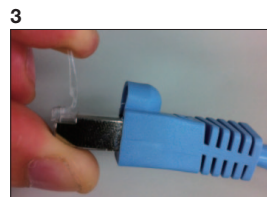

3 Remove the claw from the connector cover and pull it up.

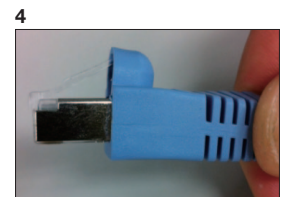

4 Confirm that the claw is standing up and return it to the connector cover.

LAN Cables

LAN Bulk Cables

LAN Connector

LAN Adapter

For LAN Pressure Contact Tool

Tester for LAN

Technical Data